
# Ladies Dri-Mesh<sup>®</sup> Sport Shirt with Tipped Collar and Dual Piping



# Front

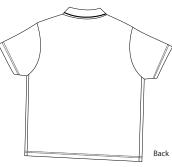



# L467

\* 3.5-ounce, 100% poly double mesh \* Contemporary Fit \* Double-needle stitching on shoulders and bottom hem \* Striped placket and collar \* Taped neck \* 3-button placket \* Dual piping on gussets \* Hemmed sleeves

Finished Measurements in Inches												
Size	XS	S	М	L	XL	XXL	Plus 1X	Plus 2X				
Chest	17.5	18.5	19.5	20.5	21.5	22.5	26.25	28.25				
Body	24	25	26	27	28	29	29.5	31				
Sleeve	6 7/8	7.25	7 5/8	8	8 3/8	8.75	9 1/8	9.5				

Chest width measured 1" below arm hole. Body length measured from back neck seam to hem. Sleeve length measured from shoulder seam to hem.



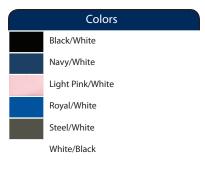

Please Note:

Colors shown are approximate and for reference only. For closest match see PMS colors, or for exact match, returnable samples and grommeted samples are available.

Color Chart											
Colors	Black/White	Navy/White	Pink/White	Royal/White	Steel/White	White/Black					
Textile PMS	19-5320TC	19-3810TC	12-1310TC	19-4044TC	18-0201TC	11-0601TC					
General PMS	Process Black	539C	7499C	294C	431C	No Match					



# Ladies Dri-Mesh<sup>®</sup> Sport Shirt with Tipped Collar and Dual Piping



Dri-mesh Screen Printing Recommendation

### Factors during printing:

**Heat Absorption:** Polyester will naturally attract more heat than a natural fiber such as cotton. When high heat is applied to polyester; like other types of polymers (such as plastics) it will reach a melting point.

**Garment Color:** The garment color is a factor to consider when printing. Darker colors such as Black, Dk. Green, Maroon, Navy, Red & Steel will experience higher shrinkage. It is especially important to test these colors before printing the entire run. Black will always have the highest shrinkage rate.

**Outside Temperature:** If you are printing in a warmer climate, we recommend you take into account the outside temperature. This will increase the temperature during printing as well as when the garment passes through the dryer.

### **Printing Steps:**

**Test Sample:** It's recommended to run a test garment (in a dark color) before printing the entire run of garments. This will allow you to gauge the temperature of the imprint as it passes through the dryer. Note: Black will always attract & retain the highest amount of heat during drying.

**Ink Type:** Dri-mesh fabric is stretchy due to the construction, so it is recommended to use a plastisol additive or an ink specifically used for full synthetic fabrics. The printed surface will be less likely to crack and the imprint will stretch with the fabric.

**Ink Application:** We recommend a 2-stroke application of ink per color process. Flash in between colors for no more than 10 – 15 seconds. Keep in mind; the heavier the ink coverage applied the greater chance of puckering around the printed area. Excessive ink coverage will attract more heat during the drying process.

**Printing Surface:** If your print surface is metal/aluminum and you have been printing all day; the surface will get hot. Factors like outside temperature and ventilation through the print facility may also make the print surface hotter. If this is a factor you contend with, we recommend running a fan on the opposite side of the flash board.

**Dryer Temperature:** We recommend the dryer temperature to be set between 290 – 300 degrees Fahrenheit depending on the outside temperature in your area. Remember the polyester will attract more heat as it passes through the dryer.

**Print Cure Temperature:** If the dryer temperature is set between 290 – 300 degrees Fahrenheit, the imprinted surface will cure between 305 – 320 degrees. Keep in mind, the darker the garment color & imprint, the more heat the garment will attract. Adjust your dryer accordingly.

**Drying Time:** We recommend the fabric be exposed to the dryer for no more than 75 seconds.

**Heat Gun:** To gauge the heat of the garment and imprint area as it passes through the dryer; a heat gun will as sist greatly in gauging the temperature. Extech Instrumental sells a gun starting at \$100.

## <u>Q & A:</u>

Q: How do I know the garment has been flashed too long?

**A:** If you are performing a 2+ color process, you may notice a shadow or an overlapping of the ink with the next color application. This is an indication the garment is shrinking under the direct heat of the flash area. Shorten the garments exposure to no more than 10 - 15 seconds and let it sit for at least 45 seconds before the next application.

Q: How do I know my drying temperature is too high?

**A:** You may notice puckering around the imprint area as well as along the seams of the garment. Using a heat gun is the best way to make sure the garment is not coming out of the dryer too hot.

Q: How do I know the ink application is too heavy or too light?

**A:** You may notice on your test sample puckering around the imprint area if the application is too heavy. Again, the ink will attract more heat than the garment itself. You want to apply enough ink to prevent the garment color from showing through the imprint.

**Q:** I only have 1 dryer to print cotton & polyester garments together:

**A:** Screening on cotton may require a higher temperature for curing. If you have 1 dryer to do both, set aside the polyester garments until you have some free space to run once the dryer has cooled to the correct temperature. Make sure the staging area is clean and free of contaminants until ready.